


HONDA

SERVICE MANUAL

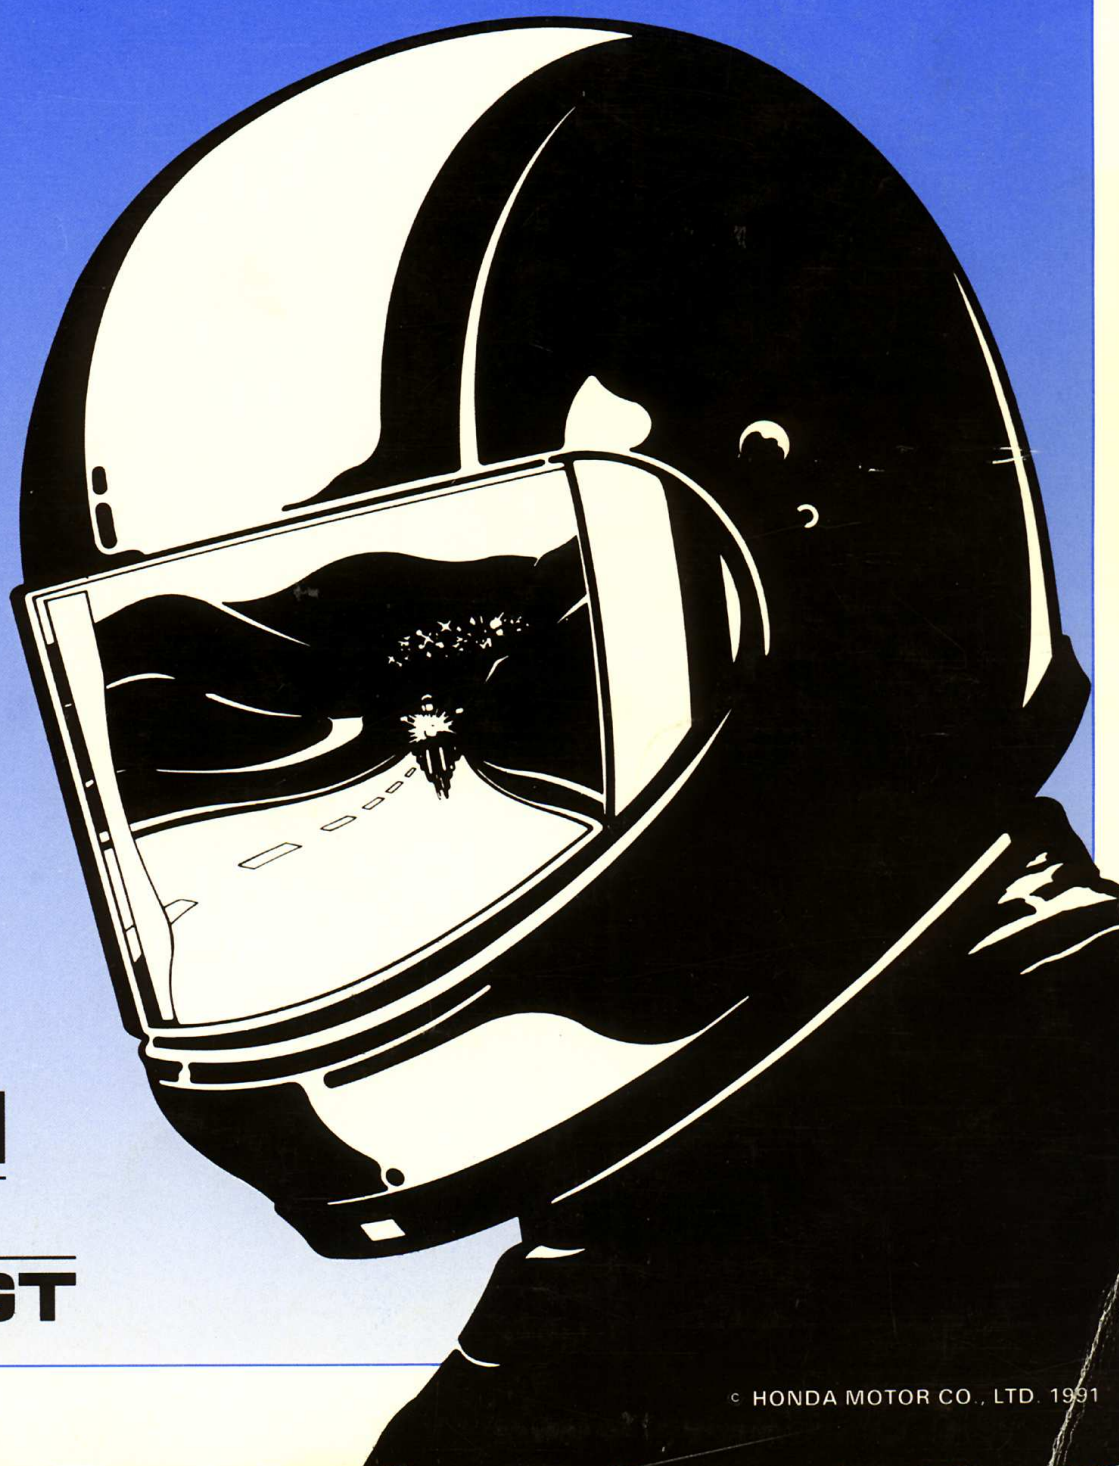

88-91
NT650
HAWK™ GT

HOW TO USE THIS MANUAL

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition and the emission levels are within the standards set by the U.S. Environmental Protection Agency and California Air Resources Board. Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 through 3 apply to the whole motorcycle, while sections 4 through 18 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration, service information and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know the source of the trouble, go to section 20, Troubleshooting.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing. HONDA MOTOR CO., LTD. reserves the right to make changes at any time without notice and without incurring any obligation whatever. No part of this publication may be reproduced without written permission.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATIONS OFFICE

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	MAINTENANCE	3
ENGINE	FUEL SYSTEM	4
	COOLING SYSTEM	5
	ENGINE REMOVAL/INSTALLATION	6
	CLUTCH/GEARSHIFT LINKAGE	7
	ALTERNATOR/STARTER CLUTCH	8
	CYLINDER HEAD/VALVES	9
	CYLINDER/PISTON	10
	CRANKSHAFT/TRANSMISSION	11
CHASSIS	FRONT WHEEL/SUSPENSION/STEERING	12
	REAR WHEEL/SUSPENSION	13
	HYDRAULIC BRAKES	14
ELECTRICAL	BATTERY/CHARGING SYSTEM	15
	IGNITION SYSTEM	16
	ELECTRIC STARTER	17
	LIGHTS/METERS/SWITCHES	18
	WIRING DIAGRAM	19
	TROUBLESHOOTING	20
	INDEX	21

21. INDEX

Air Cleaner	3-5	Engine Removal	6-3
Case	4-4	Evaporative Emission Control System (California model only)	3-11
Air Vent Control Valve Inspection (California model only)	4-16	Flywheel Installation	8-5
Alternator/Starter Clutch	8-1	Removal	8-3
Alternator	15-10	Fork	12-12
Battery/Charging System	15-1	Front Wheel/Suspension/Steering	12-1
Battery	15-4	Brake Caliper	14-11
Bearing Replacement	13-9	Master Cylinder	14-8
Brake Fluid	3-13	Wheel	12-7
Replacement/Bleeding	14-3	Fuel System	4-1
Brake Light Switch	3-14	Line	3-4
Pad Wear	3-14	Fuel Pump	18-9
Pads/Discs	14-5	Relay	18-8
Pedal	14-17	Fuel Tank	4-3
System	3-14	Gearshift Linkage	7-8
Cable & Harness Routing	1-9	General Information	1-1
Camshaft Installation	9-17	Safety	1-1
Removal	9-3	Handlebar Switches	18-6
Carburetor Assembly	4-9	Handlebars	12-3
Choke	3-5	Headlight	18-3
Disassembly	4-5	Aim	3-15
Idle Speed	3-9	Bracket	12-19
Installation	4-13	High Altitude Adjustment (U.S.A. Only)	4-14
Removal	4-5	Hydraulic Brakes	14-1
Separation/Assembly	4-12	Ignition System	16-1
Synchronization	3-8	Coil	16-3
Charging System	15-7	Switch/Meter	18-4
Clutch/Gearshift Linkage	7-1	System Inspection	16-3
Clutch Diode	17-7	Timing	16-4
Installation	7-11	Left Crankcase Cover Installation	8-6
Removal	7-4	Removal	8-2
System	3-15	Lights/Meters/Switches	18-1
Control Cable Lubrication	2-10	Lubrication	2-1
Coolant Replacement	5-3	Points	2-10
Cooling System	3-10, 5-1	Maintenance	3-1
Crankcase	11-11	Schedule	3-3
Assembly	11-16	Model Identification	1-2
Breather	3-6	Muffler/Exhaust Pipe	13-24
Separation	11-3	Neutral Switch	18-9
Crankshaft/Transmission	11-1	Nuts, Bolts, Fasteners	3-17
Crankshaft/Connecting Rod	11-4	Oil Filter Change	2-4
Cylinder Head/Valves	9-1	Oil Pressure Check	2-4
Cylinder/Piston	10-1	Switch	18-9
Cylinder	10-2	Oil Pump/Relief Valve	2-5
Compression	3-10	Pilot Screw Adjustment	4-14
Cylinder Head Assembly	9-14	Piston	10-3
Cover Installation	9-20	Installation	10-5
Cover Removal	9-3	Ring Installation	10-5
Installation	9-15	Primary Drive Gear	7-10
Cylinder Heads	9-7	Pulse Generator	16-4
Installation	10-6	Purge Control Valve Inspection (California model only)	4-15
Drive Chain	3-12	Radiator Coolant	3-9
Eccentric Bearing Carrier Installation	13-12	Radiator/Cooling Fan	5-5
Removal	13-6	Rear Wheel/Suspension	13-1
Electric Starter	17-1	Rear Brake Caliper	14-15
Emission Control Information Labels	1-18	Master Cylinder	14-13
Systems	1-16	Rear Cowling	13-25
Engine Removal/Installation	6-1	Wheel	13-3
Installation	6-5	Regulator/Rectifier	15-8
Oil Change	2-3	Right Crankcase Cover Installation	7-14
Oil Level	2-3		

INDEX

Right Crankcase Cover Removal	7-3	Turn Signal Relay	18-10
Seat	13-25	Valve Clearance	3-7
Secondary Air Supply System		Guide Replacement	9-11
(California model only)	3-11, 4-17	Seat Inspection/Refacing	9-12
Service Information		Water Pump	5-7
Alternator/Starter Clutch	8-1	Wheels/Tires	3-17
Battery/Charging System	15-1	Wiring Diagram	19-1
Clutch/Gearshift Linkage	7-1		
Cooling System	5-1		
Crankshaft/Transmission	11-1		
Cylinder Head/Valves	9-1		
Cylinder/Piston	10-1		
Electric Starter	17-1		
Engine Removal/Installation	6-2		
Front Wheel/Suspension/Steering	12-1		
Fuel System	4-1		
Hydraulic Brakes	14-1		
Ignition System	16-1		
Lights/Meters/Switches	18-1		
Lubrication	2-1		
Maintenance	3-1		
Rear Wheel/Suspension	13-1		
Service Rules	1-1		
Shock Absorber	13-14		
Side Stand	3-16		
Spark Plug	3-6		
Specifications	1-3		
Spindle	13-11		
Sprocket	13-6		
Starter Clutch	8-4		
Motor	17-3		
Relay Switch	17-6		
Steering Head Bearings	3-18		
Stem	12-20		
Suspension	3-16		
Swingarm	13-19		
Switches Location	18-2		
System Testing	5-2		
Temperature Gauge	18-8		
Sensor	18-7		
Thermostat	5-3		
Thermostatic Switch	18-7		
Throttle Operation	3-4		
Tools	1-7		
Torque Values	1-5		
Transmission	11-9		
Assembly/Installation	11-15		
Troubleshooting			
Battery/Charging System	15-3		
Clutch/Gearshift Linkage	7-2		
Cooling System	5-1		
Crankshaft/Transmission	11-2		
Cylinder Head/Valves	9-2		
Cylinder/Piston	10-1		
Electric Starter	17-1		
Front Wheel/Suspension/Steering	12-2		
Fuel System	4-2		
Hydraulic Brakes	14-2		
Ignition System	16-2		
Lights/Meters/Switches	18-2		
Lubrication	2-2		
Rear Wheel/Suspension	13-2		